

Gtech

sweeper

Powerful | Cordless


Model: SW02 Advanced

OPERATING MANUAL

What is in the box

- 1 Main unit
- 2 Brush Bar
- 3 Front Visor
- 4 Dust Tray
- 5 Upper Handle
- 6 Telescopic Handle Tubes
- 7 Lower Handle
- 8 Charger (inside dust tray)
- 9 LED Indicator
- 10 ON/OFF button
- 11 Edge wheel

⚠ Warning: Only use a replacement battery as supplied by the manufacturer and only use the charger provided with the product. Using another charger may damage the product and battery.

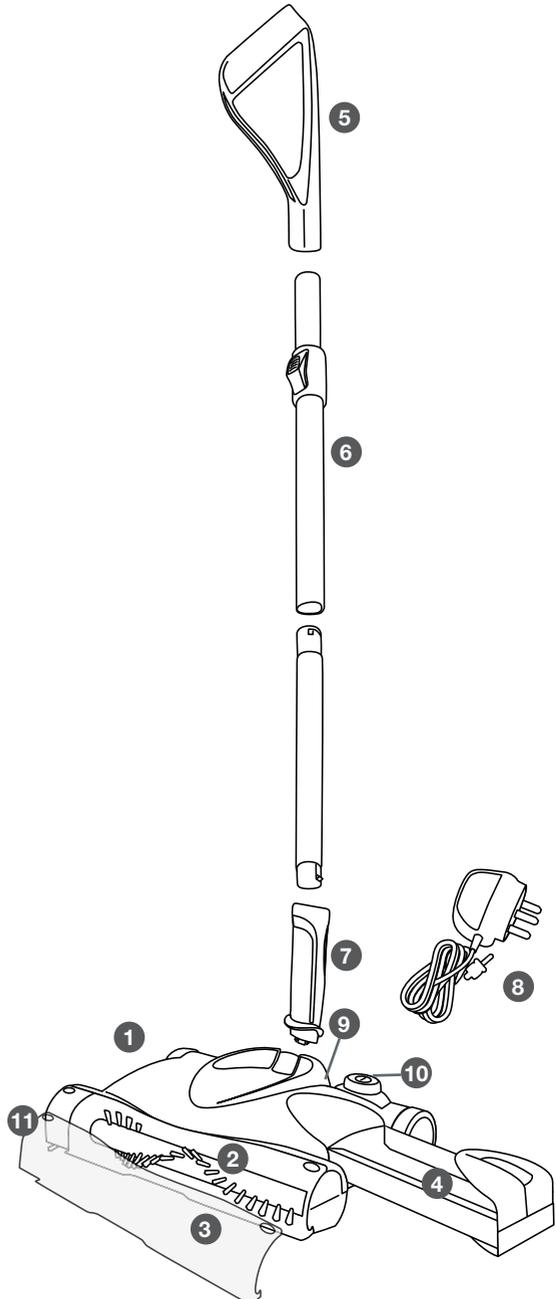

Important Safeguards:



IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE.



RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

Do not use in rain or leave outdoors whilst raining.




WARNING: When using an electrical appliance basic safety precautions should always be observed, including the following to reduce the risk of fire; electrical shock, or injury:


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- 1 Do not store or charge the unit outdoors.
- 2 Do not use outdoors or on wet surfaces.
- 3 Do not handle the charger or appliance with wet hands.
- 4 Not to be used as a toy; pay close attention when used by or near children.
- 5 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 6 Children should be supervised to ensure that they don't play with the appliance.
- 7 Use only as described in this manual. Never modify the charger in any way.
- 8 Only use the charger supplied with the product.
- 9 Do not attempt to use the charger with any other product nor attempt to charge this product with another charger. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- 10 Do not abuse the charger cord as this can increase the risk of fire or electric shock. Never carry the charger by the cord. Do not pull the cord to disconnect from a socket; grasp the plug and pull to disconnect.
- 11 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 12 A hazard may occur if the appliance runs over the supply cord.
- 13 The plug must be removed from the socket before cleaning or maintaining the appliance.
- 14 Keep the charger cord away from hot surfaces and sharp edges.
- 15 Do not handle the charger with wet hands.
- 16 The battery must be removed from the appliance before it is discarded.
- 17 Before use check the power supply and charger cord for signs of damage or ageing. To avoid damage it is not recommended to wrap the cord around the charger for storage. A damaged or entangled charger cord can increase the risk of fire and electric shock.
- 18 The appliance must be disconnected from the mains supply when removing the battery.
- 19 This product includes NiMH batteries; **do not incinerate batteries or expose to high temperatures**, as they may explode.
- 20 Leaks from battery cells can occur under extreme conditions. If the liquid gets on the skin wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Liquid ejected from the battery may cause irritation or burns. In an emergency situation contact professional help immediately!
- 21 Do not use with any opening blocked; keep openings free of dust, lint, hair and anything that may interfere with the brushes.
- 22 Keep hair, clothing, fingers, and all parts of body clear of moving parts.
- 23 Do not pick up anything that is flammable, burning or smoking.
- 24 Use extra care when cleaning on stairs.


Assembly

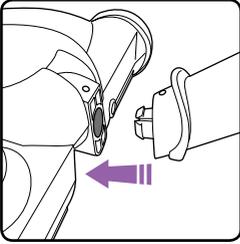

Align the dots and insert lower handle into main unit until it clicks into place.

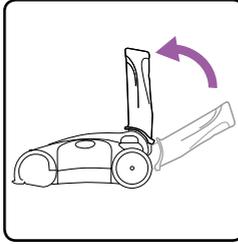


Push handle into upright position.

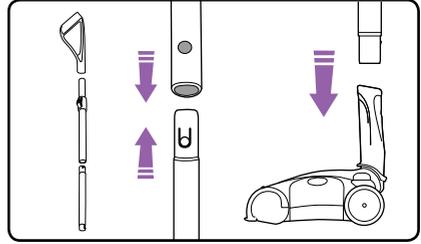


Assemble the three parts of the telescopic tube as shown, ensuring each piece clicks into place. Insert telescopic handle into lower handle until it clicks into place.


Operation

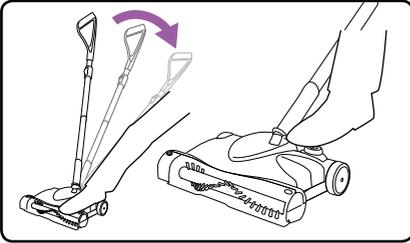

Press foot on the machine head and pull the upper handle back. Press "on" button with your foot.

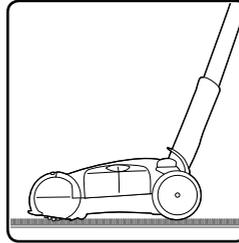


For normal cleaning push the sweeper flat over the floor.

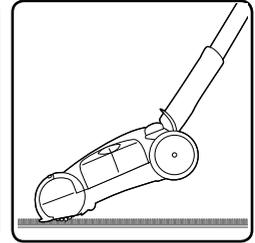


For deeper cleaning and carpet grooming, lift the handle to lower the brush bar into the carpet.


Handheld Use and Stair Cleaning

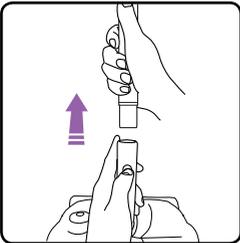

Remove telescopic handle from the lower handle by depressing button on handle and removing tube.

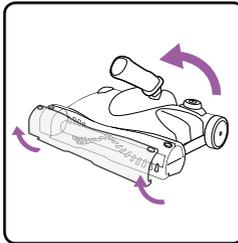


Remove the visor by simultaneously unclipping the bottom outer edges then lifting off. Push lower handle fully forward.

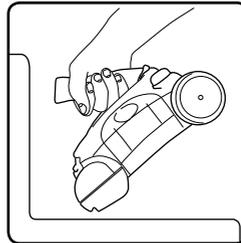


Switch product on and use on stairs or upholstery.

Carrying

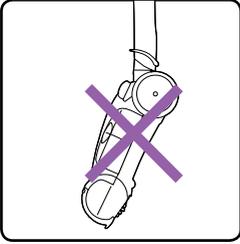


To avoid spilling dirt from the dust tray do not carry the product 'nose down'.


Emptying the Bin

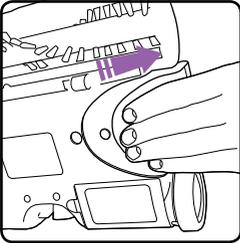

To achieve the best performance, empty the dust tray after each use. Press underneath the tray to release catch.

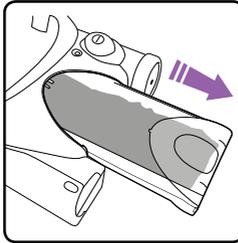


Completely remove tray from main unit.

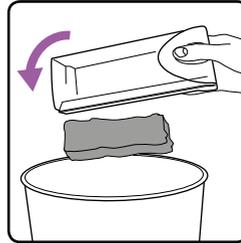


Tip the dirt into the bin. The tray can be wiped clean with a dry cloth.

Discharging the Battery

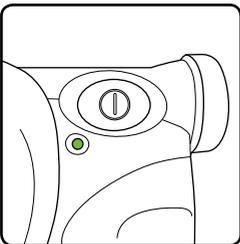

The LED indicator shows the charge level of the battery when discharging during use.

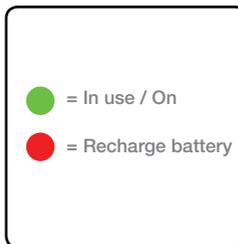


When the battery is fully discharged the product will stop and the LED flashes red.


Recharging



Plug the charger into an electrical outlet.

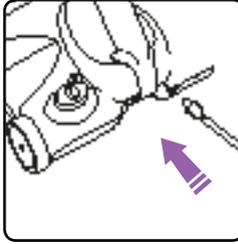

Connect the charge adaptor to the charging jack on the rear of the main unit.

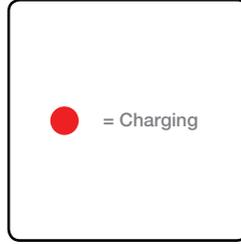

A discharged battery will only take around 16 hours to fully recharge. Do not charge the product for longer than 24 hours.

- ⚠ Warning:** Only use the charger provided with the product. Using another charger may damage the product and battery.
- ⚠ Warning:** Before use check the power supply and charger cables for signs of damage or ageing. A damaged charger can increase risk of fire or electric shock.
- ⚠ Warning:** If the battery is damaged in any way do not attempt to charge it and replace it immediately.

Long-term storage

To maintain optimum battery life and performance it is recommended to follow these guidelines.

Storing a fully discharged battery for over 1 month can damage the battery and reduce its life. Recharge a flat battery after use, and do not leave the battery in a fully discharged condition for more than 1 month.

If the product is to be stored for a longer period of time partly charge the battery every 3 months.

Care & Maintenance – Routine


Each week clean the product with a dry cloth, plus the chamber in which the dust tray fits. Remove hair and fibre from the Brush Bar and Edge Wheel.

- Don't use abrasive materials to clean the product or immerse it in water.
- Don't pick up liquids or use on wet floors.
- Don't use on concrete, Tarmacadam or other rough surfaces.
- Don't pick up pieces of string or fabrics with the unit.
- Don't clean rug tassels or frayed carpets with the unit.


⚠ Warning: Do not accidentally turn the unit on while cleaning it.

Care & Maintenance – Brush bar and side brush


The Brush Bar and Edge Wheel can be removed for cleaning or replacement.

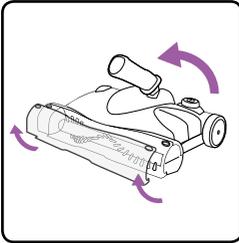


Remove the visor by simultaneously unclipping the bottom outer edges then lifting off.

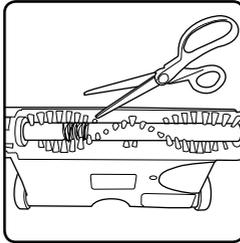


Remove hair and thread from brushbar with a pair of scissors, taking care not to cut the brush bristles.

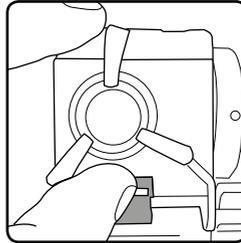


To remove the edge wheel, push the latch and pull the unit away from the body of the sweeper.

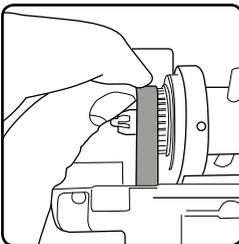

Slide the belt off the end of the brush bar drive gear.

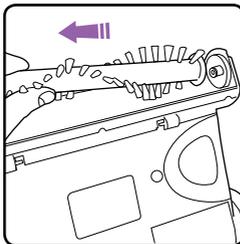

Lift the end of the brush bar, then slide out of the unit. Remove any hair, fibre and dust from the edge wheel and brush bar.

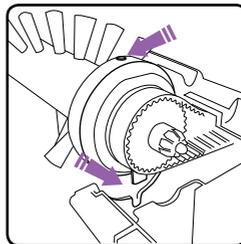


Replace the Brush Bar by fitting the shaft into the bearing in the housing, then engage the end with the drive gear into the unit. Replace belt when re-assembling.

Note: relocate peg to notch in sweeper body, keeping dot facing upwards.


Removing battery

At the end of the product's or battery's life the battery should be removed for disposal and recycling. Only a technically competent person should undertake battery removal and replacement.


If uncertain as to how to replace your battery pack, we suggest you take your unit to a reputable small appliance service technician to have this service performed.

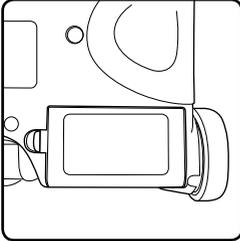

Switch off the sweeper, remove charger and dust tray and turn the sweeper over. Unclip the battery compartment.

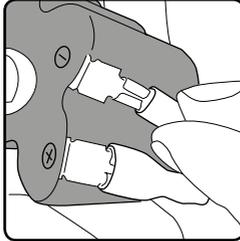

Remove the battery and locate the connectors. Starting with the black terminal, slide back the plastic cover.

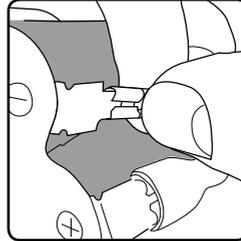

Push the latch on the connector and pull it away from the battery. Repeat for red connector.



Warning: Never touch the metal contacts in the connectors with a metal object.

ONLY USE A REPLACEMENT BATTERY AS SUPPLIED BY MANUFACTURER
Replacement batteries, Brush Bars and Edge Wheels can be purchased through the helpline Tel: 01905 345891 or by visiting www.gtechonline.co.uk

Product not working properly?

- Empty the Dust Tray.
- Remove any build-up of hair or fibre from the Brush Bar and Edge Wheel.
- Fully discharge the product (run until battery is flat) and then recharge for 16 hours.

WARRANTY – TERMS AND CONDITIONS

Grey Technology has provided the SW02 Cordless Power Sweeper with a 12 month guarantee.

In Guarantee:

Please retain your receipt as proof of purchase. In the rare and unfortunate event of your Gtech product being faulty, please accept our apologies and we will aim to remedy the problem as fast as possible once brought to our attention. However please be aware that due to Company Policy, Grey Technology can only repair or replace all or part of the product if proof of purchase is provided and the claim is made within 12 months of the purchase date.

If your product is within the 12 months warranty period you should either return this product with its receipt to the retailers where the product was purchased or if a simple part or advice is required ring the Gtech Helpline where we will be more than happy to assist.

Note: Gtech cannot refund any monies if the product was brought from a third party.

Note: The battery is a consumable item and is not covered by this guarantee.

We would like to remind our customers that the Gtech guarantee does not cover any unauthorised repairs and will be annulled:

- If the product has been damaged due to incorrect use or maintenance.
- If any part is modified or replaced or if it is used in any way that is not recommended by Gtech.
- If it is used with any parts not produced or not recommended by Gtech.
- If it is used for purposes other than those specified by Gtech.

If after reading the manual and following the instructions you are sure that the product is defective please call the **Gtech Helpline on 01905 345891**.

A Customer Service Advisor will be available to deal with any problems you have with our product. To assist them please be ready with the product, a detailed description of the problem, and your proof of purchase.

Out of Guarantee:

If your Gtech product is over 12 months old and you need any parts or advice then please contact our Helpline. Parts will be sent out usually within 2 weeks of request.

Customer helpline **01905 345891**
support@greytechnology.co.uk
www.gtechonline.co.uk



The  symbol indicates that this product is covered by legislation for waste electrical and electronic products (EN2002/96/EC)

When the sweeper has reached the end of its life, it and the Li-Ion battery it contains should not be disposed of with general household waste. The battery should be removed from the sweeper and both should then be disposed of properly at a recognised recycling facility.

Call your local council, civic amenity site, or recycling centre for information on the disposal and recycling of electrical products.

Alternatively visit

www.recycle-more.co.uk

for advice on recycling and to find your nearest recycling facilities.



13/03 

WARNING: Only use the charger supplied with the product.

Using another charger may damage the product and the battery and will invalidate your guarantee.

FOR HOUSEHOLD USE ONLY

SW22 TECHNICAL SPECIFICATION

Unit operating cycle with full battery	up to 60 mins (dependent on floor surface)
Battery type	7.2V DC 1.3Ah
Charging period for fully discharged battery	16 hours
Battery charger output	12V DC, 150mA
Battery charger model	JOD-S-120015BS
Sound Level	75db (A)
Weight	1.6kg



Grey Technology Limited

Cupola Court, Spetchley, Worcestershire WR5 1RL

email: support@greytechnology.co.uk

telephone: 01905 345891

www.gtechonline.co.uk